

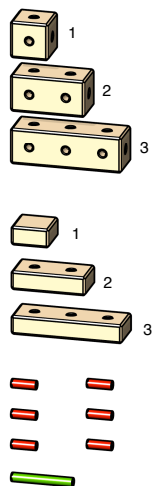


119 Akkuschauber / Cordless Screwdriver


LEVEL

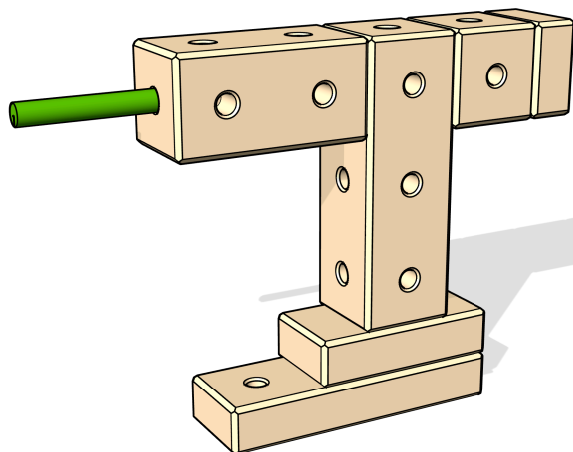


1

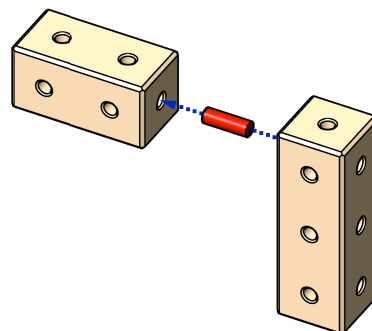


2

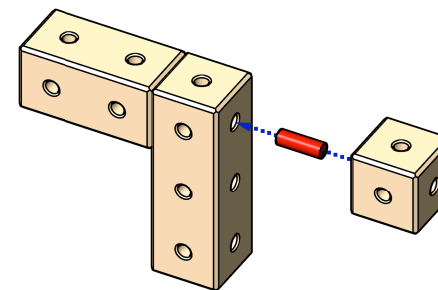


3

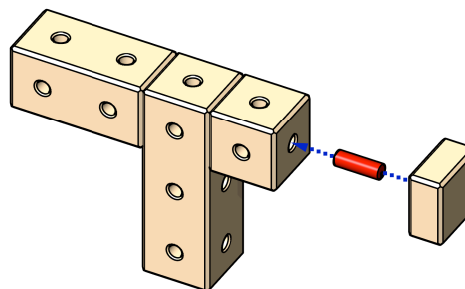

4

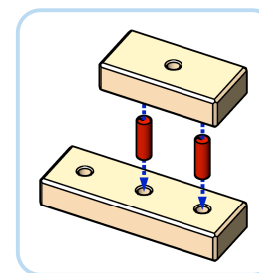

5

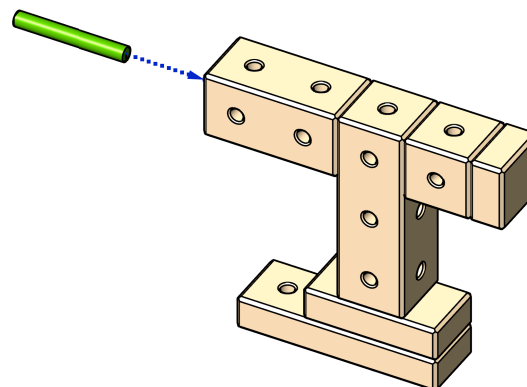

6

